

SERIAL NUMBER SEQUENCE

Single End Tenoner

Model 2A No serial numbers 1948  
 Model 2A 1001 until 1955, 5— until 1965, 65— until 1968, 828— until 1978, then 7828— 1953

Mortisers

Model 2A chain No serial numbers 1948  
 Model 15 chain 2000 until 1955, 5— until 1965, 65— until 1968, 832— until 1978, then 7832— 1953

Model 30 hyd. No serial numbers 1955  
 chain  
 Model 40 hyd. No serial numbers 1956  
 chain  
 Model 41 hyd. No serial numbers 1960  
 chain  
 Model 10 hol- 2001 until 1955, 5— until 1965, 65— until 1968, 840— until 1978, then 7840— 1957  
 low chisel  
 Model 5 hyd. No record of serial numbers 1955  
 chisel

Wood Lathes

Model 45 5—1000 until 1968, 845— until 1978, then 7845— 1960  
 Model 90 0—1000 until 1968, 890— until 1978 then 7890— 1955

Jointers

Model 50 (6") 1100-up 0— in 1960, 65— in 1965 until 1968, 850— until 1978, then 7850— 1955  
 Model 60 (8") 3000-up until 1960, 0— until 1968, 861 until 1978, then 7861 1957

Scroll Saw

Model 95 1—101 until 1968, 895— until 1978, then 7895— 1961

Spindle Shaper

Model 25 1—101 until 1965 1961  
 Model 26 65—100 until 1968, 826— until 1978, then 7826— 1965

Sanders

Model 30 0—101 until 1968, 830— until 1977 1960  
 Model 30B 630— until 1978, then 7830— 1976  
 Model 30A 930A000 until 1977 1969  
 Model 33 0—101 until 1978, 833— until 1977 1960  
 Model 33B 633— until 1978, then 7833— 1976  
 Model 35 0—101 until 1968, 835— until 1977 1963  
 Model 35B 735— until 1978, then 7835— 1977

Drill Presses

Model 1100 5—1000 1965  
 Model 1150 4—0001 until 1968, 815V or S— until 1976 1964  
 Model 1150A 615V or S— until 1978, then 7815V or S— 1976  
 Model 1200 5—1001 until 1965, 65— until 1968, 820V or S— until 1978, then 7820V or S— 1955

Tilting Arbor Saw

Model 62 4—100 until 1968, 862— until 1978, then 7862— 1964  
 Model 65 5—100 until 1965, then 65— 1955  
 Model 66 66—101 until 1968, 866— until 1968, then 7866— 1965

Model 70 1001 until 1955, then 5— until 0—600 1954  
 Model 71 0—600 1960  
 Model 72 8—100 until 1968, 872— until 1978, then 7872—  
 Model 68 268— until 1978, then 7868—

Wood Band Saws

Model 140 5—1000 1955  
 Model 141 1—101 until 1968, 841— until 1978, then 7841— 1961  
 Model 80 5—1000 1955  
 Model 81 0—1000 until 1968, 881— until 1978, then 7881— 1960

Metal Band Saws

Model 143 1—101 until 1968, 843— until 1978, then 7843— 1961  
 Model 83(friction cutting) No serial numbers 1960  
 Model 85 No serial numbers 1958  
 Model 86 9—100 1959  
 Model 87 0—1729 until 1968, 887— until 1968 then 7887— 1960  
 Model 88 488— until 1978, then 7888— 1974  
 Model 89 989— 1969  
 Model 2 5—102 until 1968, then 802— 1965  
 Model 5 4—101 until 1968, then 805— 1964  
 Model 6 006— 1970  
 Model 8 4—101 until 1968, then 808— 1964

12" Planers

Model 12 No serial numbers until 6/1950 1948  
 Model 100 6200 until 1955, 5— until 1965, 65— until 1968, 800— until 1978, then 7800— 1955

16" Planers

Model CE 16 No serial numbers  
 Model CD 16 No serial numbers  
 Model CS 16 No serial numbers  
 Model E 16 7001 1960  
 Model 160 0—to 1968, 860—, then 7860— in 1978 1960

18" Planers

Model 180 1—101 up until 1968, 880— until 1978, then 7880— 1961

20" Planers

Model 2A No serial numbers 1930  
 Model 220 5100 up 1952  
 Model 221 5—5525 until 1965, 65— until 1968, 822— until 1978, then 7822— 1955

24" Planers

Model 3A No serial numbers 1930  
 Model 224 5100 until 1955, then 8001 1952  
 Model 225 8360 until 1960, 0— until 1968, 825— until 1978, then 7825— 1957

\*Prefix underlined changed yearly to match year

---



---



---



---



---



---



---